BELT DRIVE DRUM FAN - BELT ADJUSTMENT



MODELS: DFC-36B / DFC-42B / DFC-48B





STEP 1: REMOVE SCREWS AND WASHERS FROM BACK GRILL



STEP 2: REMOVE BACK GRILL






STEP 3: LOOSEN 4 BOLTS THAT SECURE THE MOTOR TO THE FRAME

BELT DRIVE DRUM FAN - BELT ADJUSTMENT



MODELS: DFC-36B / DFC-42B / DFC-48B



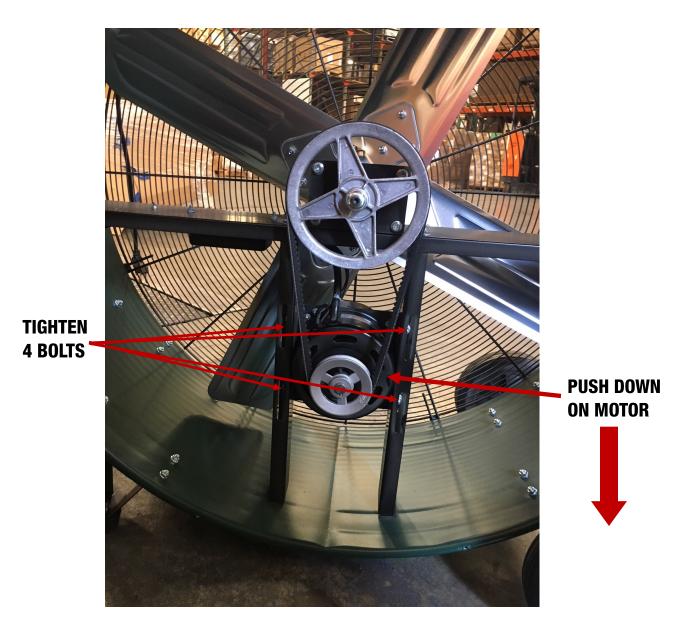

STEP 4:

PUSH DOWN ON MOTOR TO TIGHTEN FAN BELT.
THEN TIGHTEN 4 BOLTS TO RESECURE THE MOTOR
IN PLACE.